



- | | | |
|---|--|---|
| <ol style="list-style-type: none"> 1. STALL WARNING INDICATOR 2. ADF INDICATOR 3. CLOCK 4. TURN INDICATOR 5. AIRSPEED INDICATOR 6. DIRECTIONAL GYRO 7. ATTITUDE GYRO 8. GEAR "UP" WARNING LIGHT 9. GEAR "IN TRANSIT" LIGHT 10. VERTICAL SPEED INDICATOR 11. ALTIMETER 12. AUDIO SELECTOR 13. COMPASS 14. OMNI & GLIDESLOPE INDICATOR 15. AIR COND. INDICATOR LIGHT 16. TRANSCIVERS 17. TRANSPONDER | <ol style="list-style-type: none"> 18. ADF 19. DME 20. SUCTION GAUGE 21. CIGAR LIGHTER 22. HEATER/DEFROSTER CONTROLS 23. MIKE JACK 24. PHONE JACK 25. AUTOPILOT 26. ENGINE INSTRUMENT CLUSTER 27. OMNI - COUPLER 28. NAV SELECTOR 29. PITCH CONTROL 30. MAGNETO & STARTER SWITCH 31. FUEL GAUGES 32. MANIFOLD PRESSURE GAUGE 33. TACHOMETER 34. GEAR SELECTOR | <ol style="list-style-type: none"> 35. GEAR OVERRIDE LIGHT (IF AIRCRAFT EQUIPPED WITH BACKUP GEAR EXTENDER) 36. GEAR POSITION LIGHTS 37. MICROPHONE 38. FRICTION LOCK 39. THROTTLE QUADRANT 40. ALTERNATE AIR CONTROL 41. EGT GAUGE 42. INSTRUMENT PANEL LIGHTS 43. CIRCUIT BREAKER PANEL 44. CIRCUIT BREAKER COVER (EARLY MODELS ONLY) 45. MIXTURE CONTROL LOCK (SER. NOS. 7535001 AND UP) 46. ANNUNCIATOR PANEL (SER. NOS. 7535001 AND UP) 47. ENGINE HOUR METER (SER. NOS. 28 R-7635001 AND UP) |
|---|--|---|